


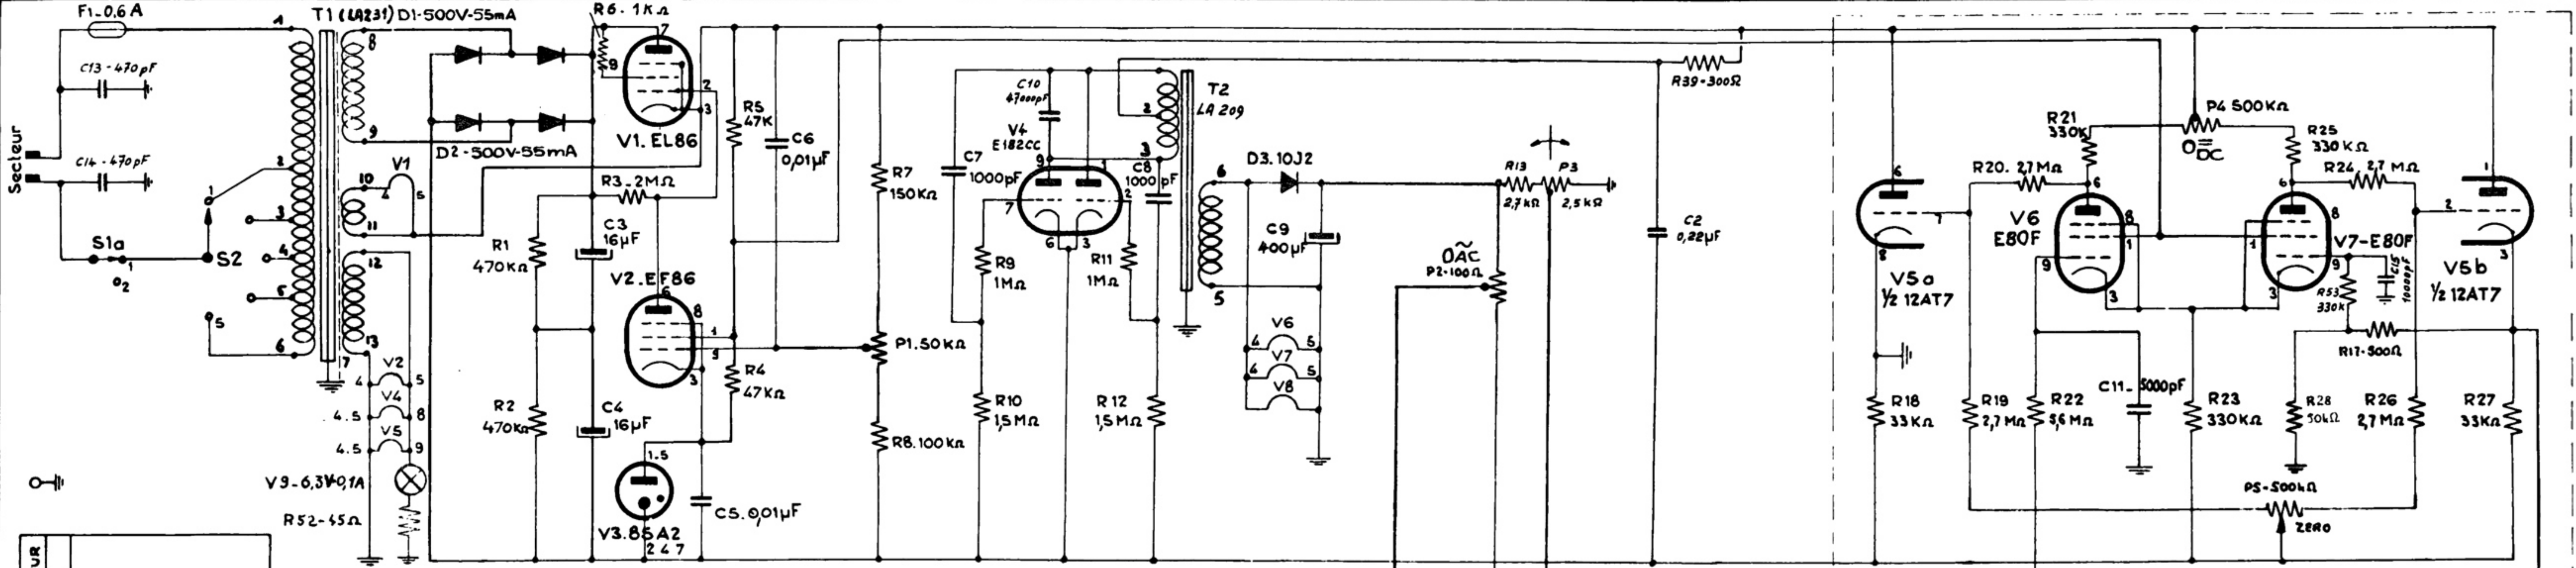

CONTACTEUR	Pos.	FONCTION
S1a	1	0
S1a	2	0
S2	1	115
S2	2	127
S2	3	160
S2	4	220
S2	5	250 V
S3a...f	1	~ AC
S3a...f	2	- DC
S3a...f	3	+ DC
S3a...f	4	↑
S3a...f	5	OHMS
S4a...d	1	ZERO DC
S4a...d	2	100 mV, OHMS
S4a...d	3	300 mV, OHMS x 10
S4a...d	4	1V, OHMS x 100
S4a...d	5	3V, kΩ
S4a...d	6	10V, kΩ x 10
S4a...d	7	30V, kΩ x 100
S4a...d	8	100V, MΩ
S4a...d	9	300V, MΩ x 10
S4a...d	10	1000V DC
S4a...d	11	ZERO DC

