 
 
 
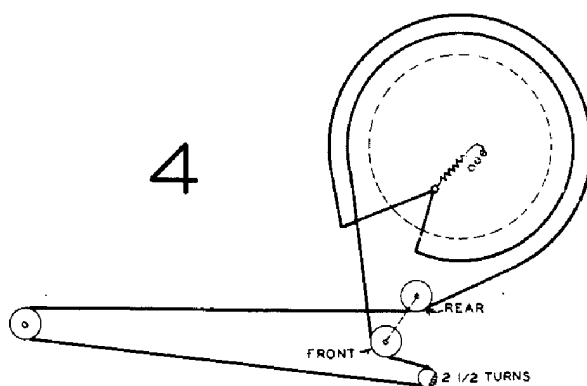 
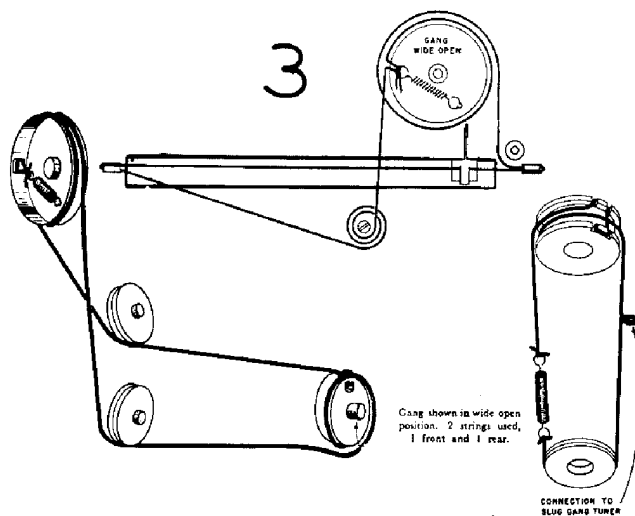 


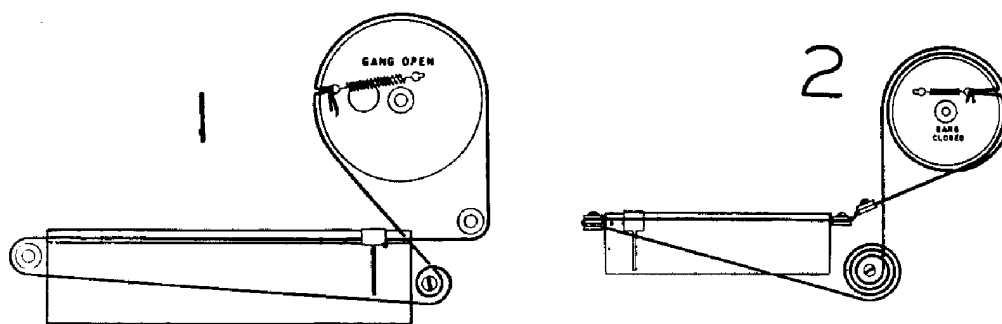


A SHOWS CORRECT STRINGING WITH GANG P 4975
B SHOWS CORRECT STRINGING WITH GANG 68A2

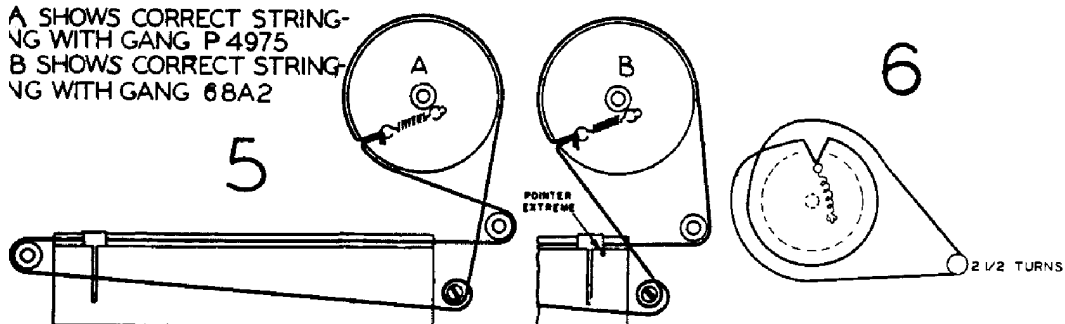


7

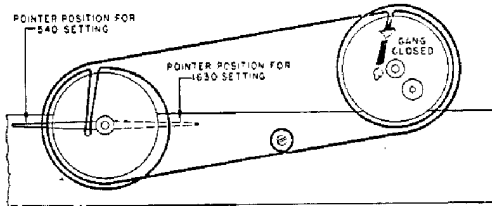

 
8

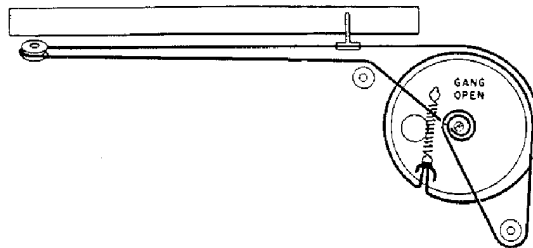


9




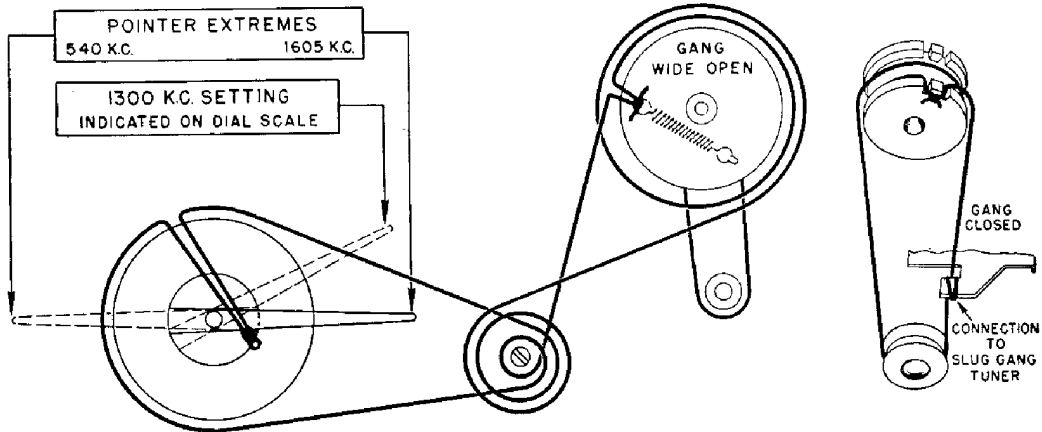 





10

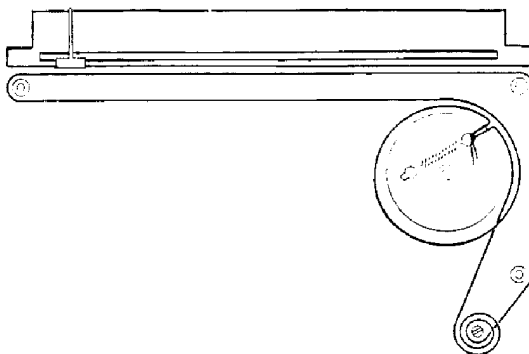 





11

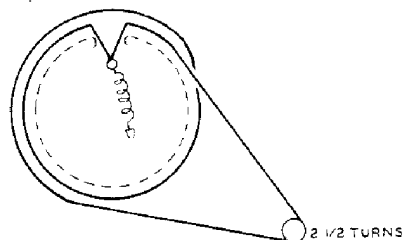 

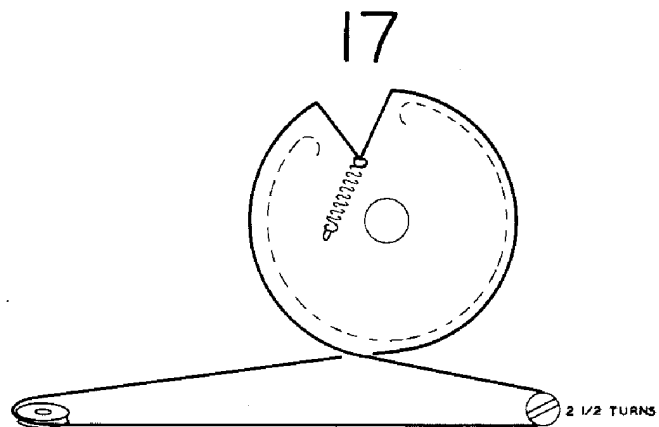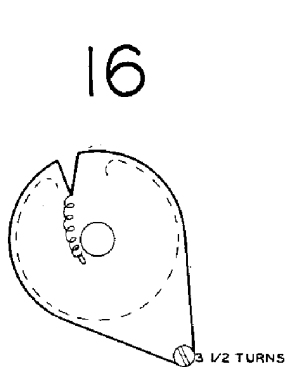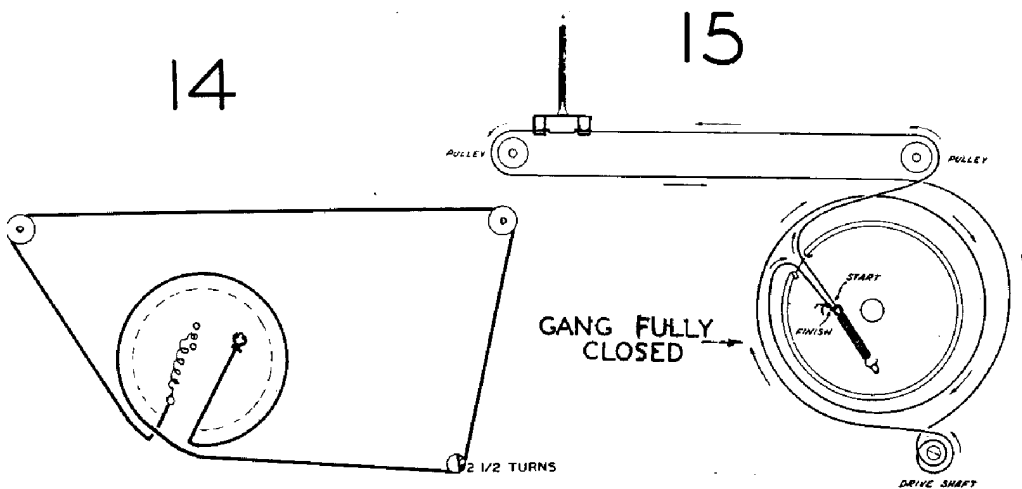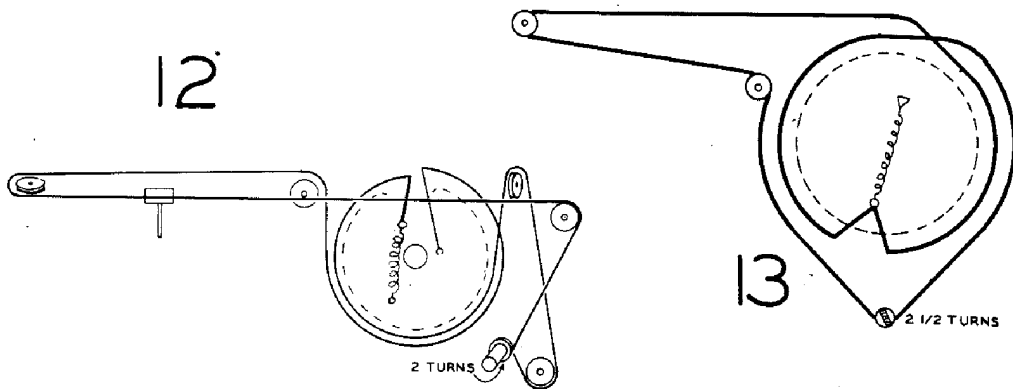    


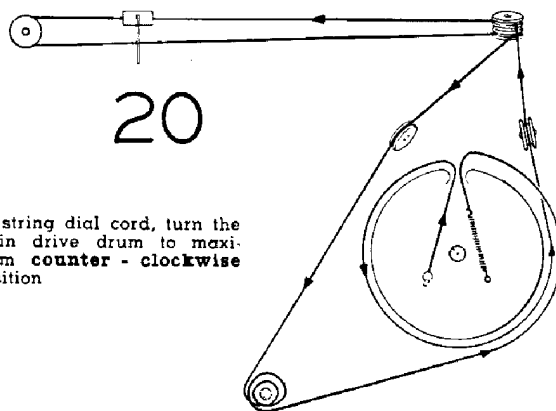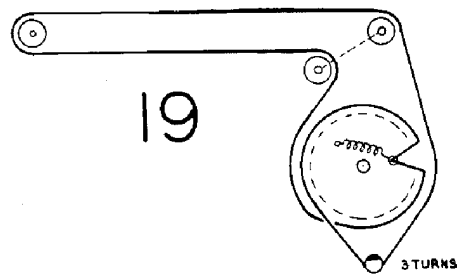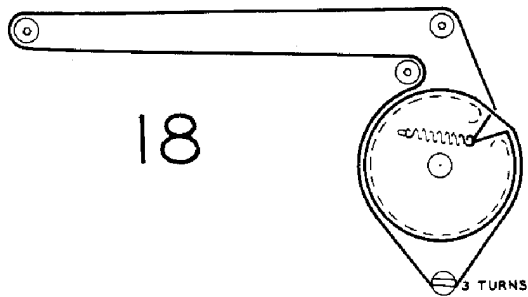   

    To string dial cord, turn the main drive drum to maximum counter-clockwise position

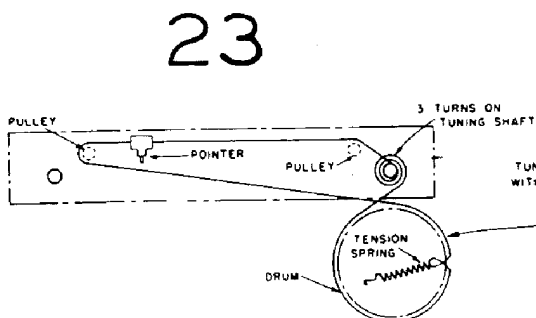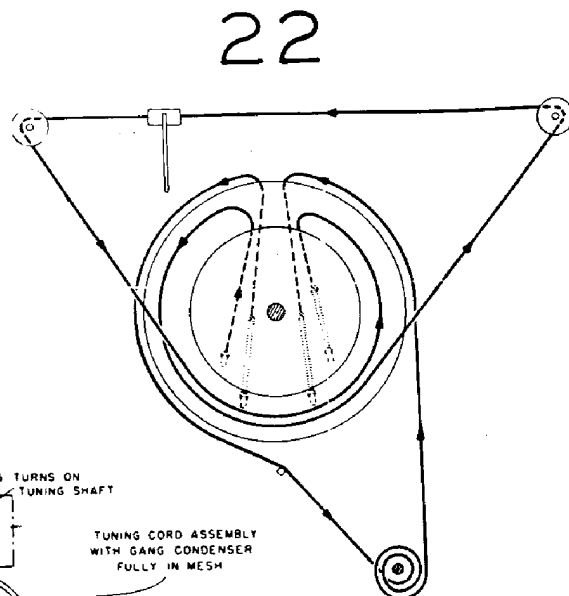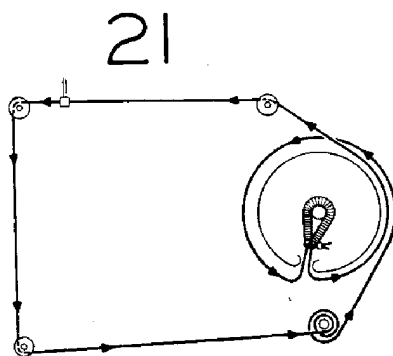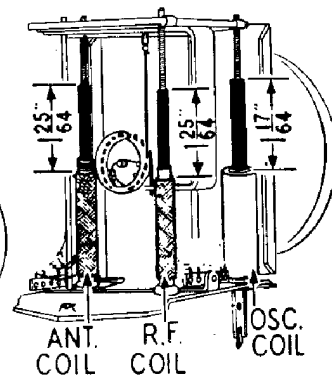


 TUNING CORD ASSEMBLY WITH GANG CONDENSER FULLY IN MESH

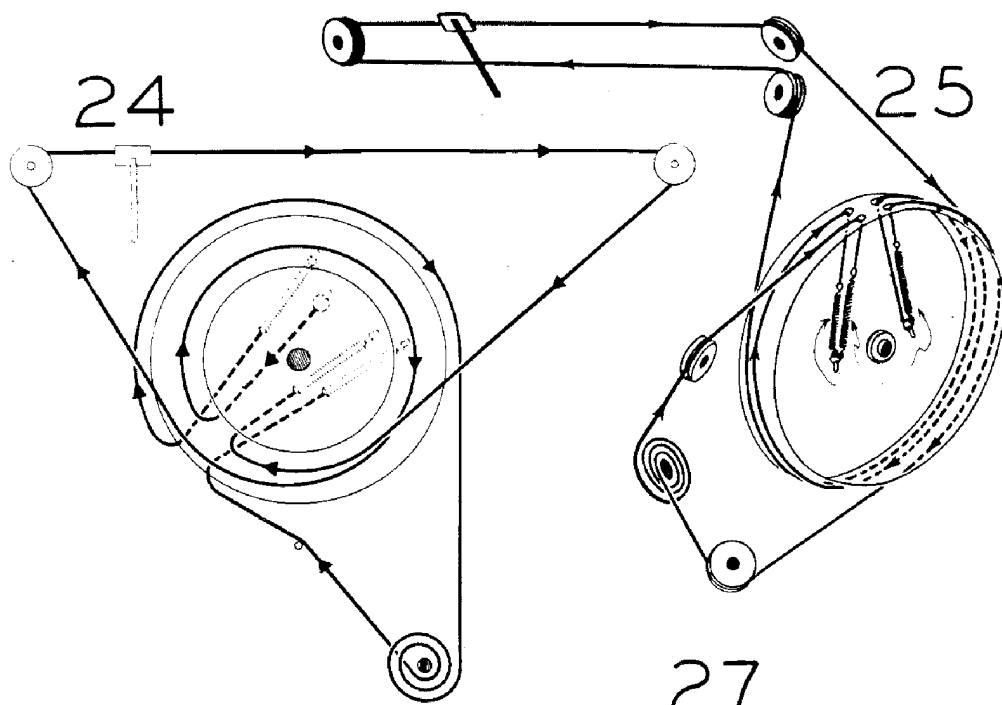


26


 
27







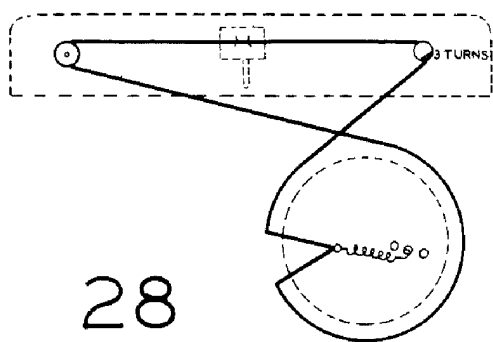






28

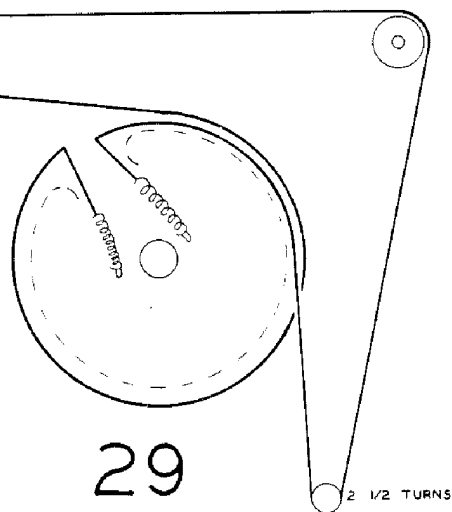 

29

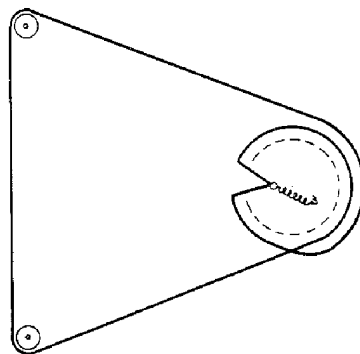 
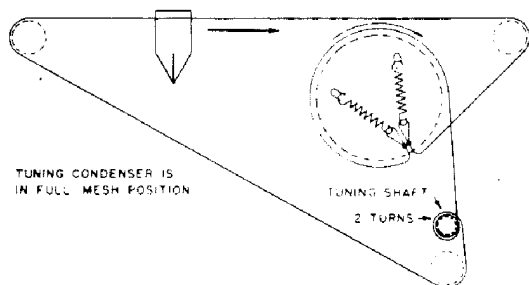 


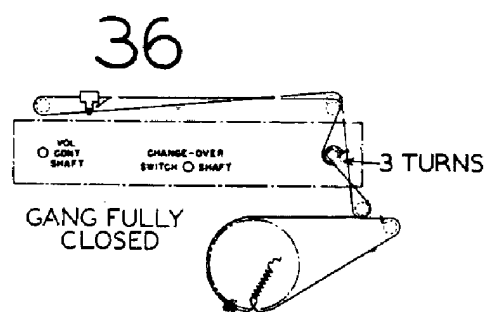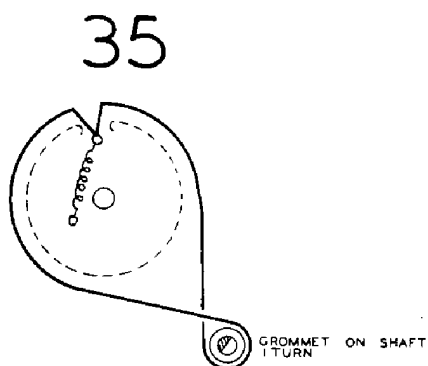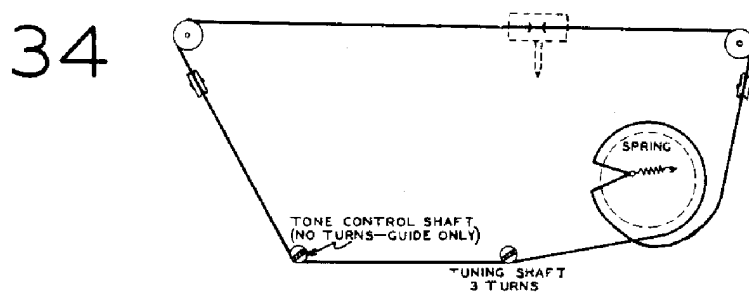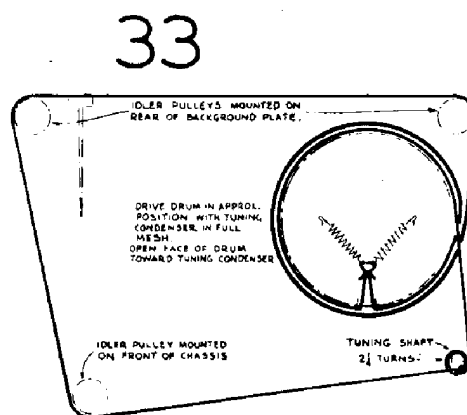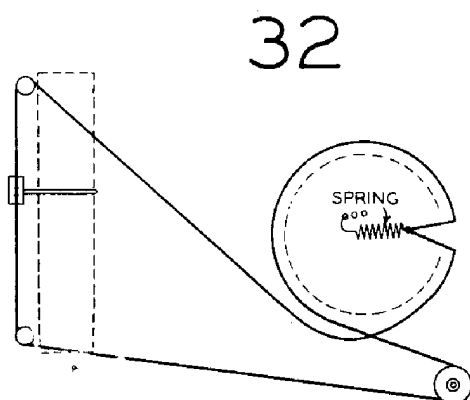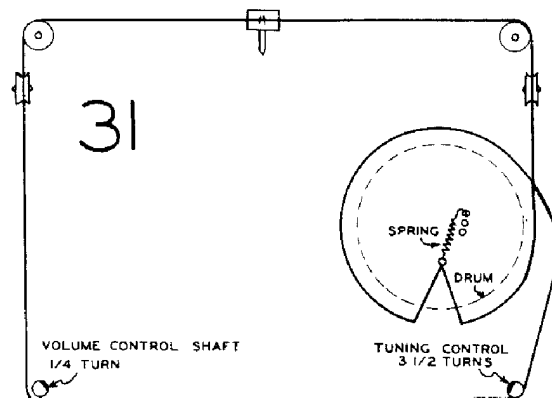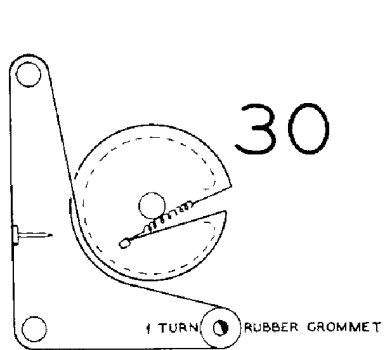       

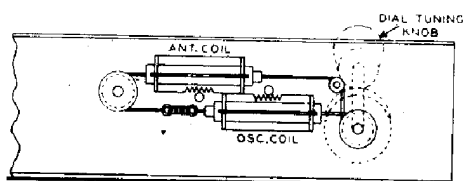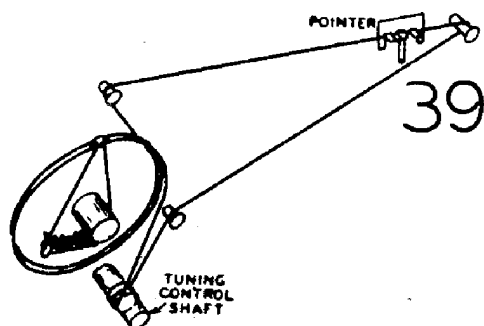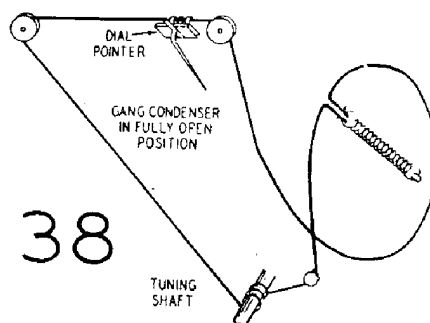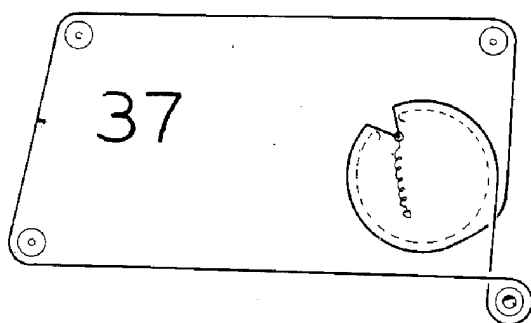    

View of Tuning Coil Assembly.

  40
When tying the string to the tension spring make sure that the spring takes up all slack.

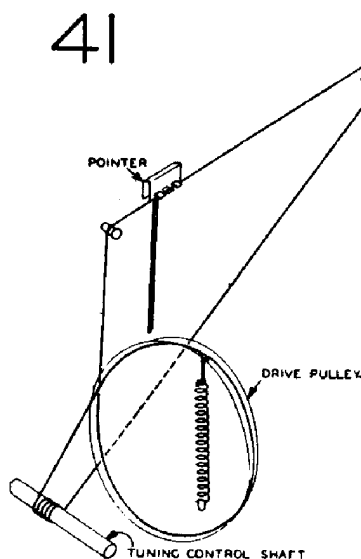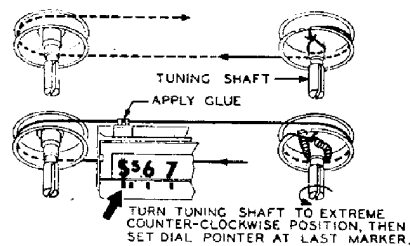

Turn gang condenser to full open position — See illustration. Use a new drive cord 42 inches in length.

