


# Circuit Diagram/Schaltbild/Schéma électrique

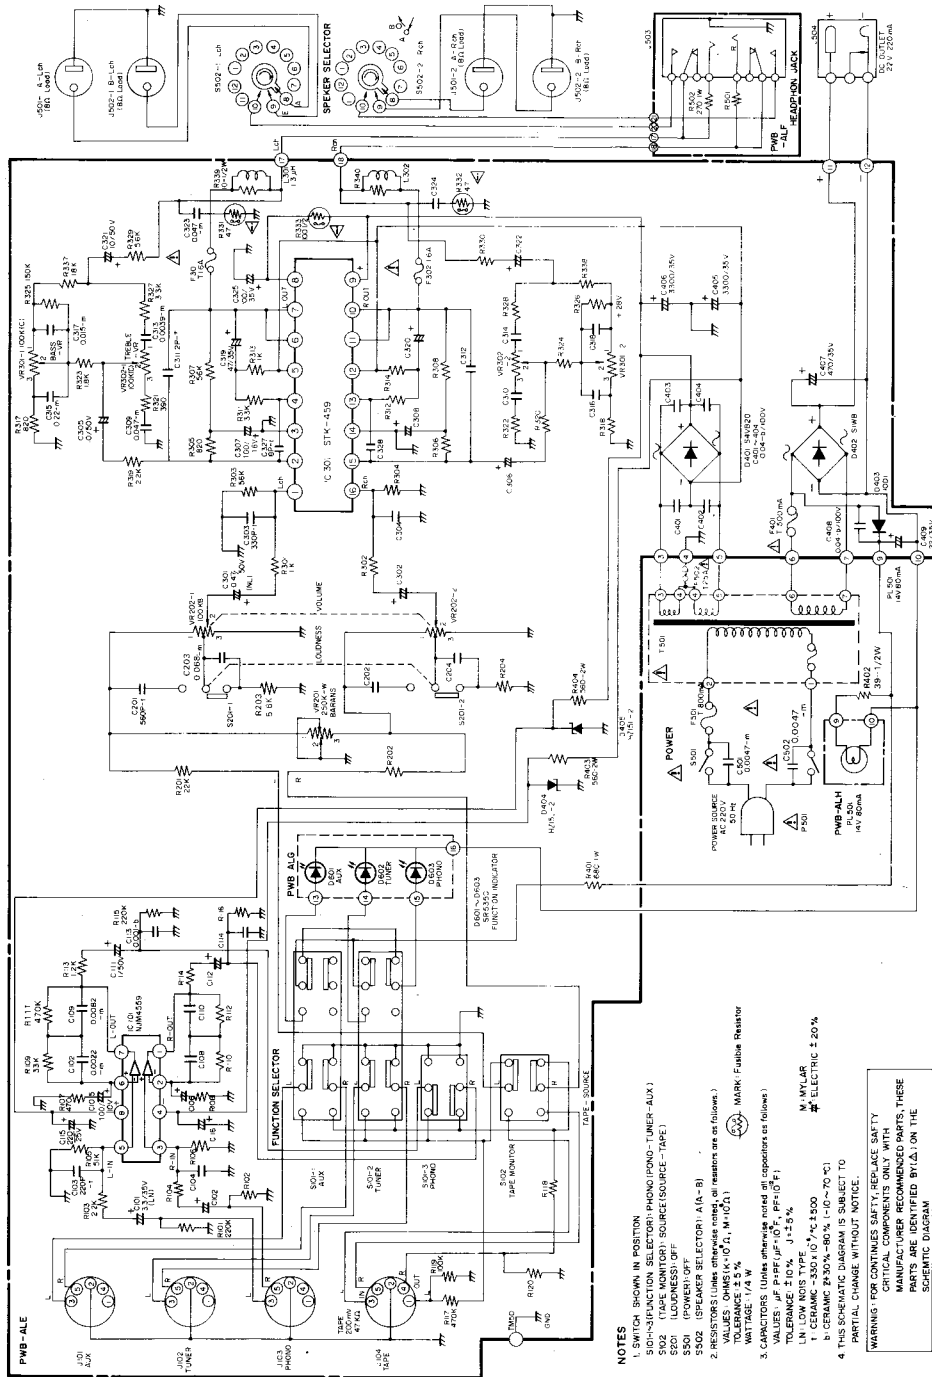

- NOTES**
1. SWITCH SHOWN IN POSITION  
 S10=FUNCTION SELECTOR (PHONO-TUNER-AUX.)  
 S20 (LOWNESS) SOURCE (SOURCE-PIPE)  
 S30 (POWER) OFF  
 S502 (SPEAKER SELECTOR) A(A-B)
  2. RESISTORS (Unless otherwise noted, all resistors are as follows.)  
 Values:  $\mu$ P, P, 1/4 W, 1/2 W, 1 W, 2 W, 5 W, 10 W, 1/4 W (10 $\Omega$ )  
 TOLERANCE:  $\pm$  5%  
 WATTAGE: 1/4 W
  3. CAPACITORS (Unless otherwise noted, all capacitors are as follows.)  
 Values:  $\mu$ F, P, 10 $\mu$ F, 100 $\mu$ F, 1000 $\mu$ F  
 L=LOW NOIS TYPE,  $\tau$ =5%  
 1=CERAMIC-330 $\times$ 10 $^7$ / $\mu$ C $\pm$ 500  
 2=CERAMIC-330 $\times$ 10 $^6$ -80% (-10~70 $^{\circ}$ C)  
 4 THIS SCHEMATIC DIAGRAM IS SUBJECT TO PARTIAL CHANGE WITHOUT NOTICE.
- WARNING FOR CONTINUES SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH IDENTICAL PARTS. THESE PARTS ARE IDENTIFIED BY  $\Delta$  ON THE SCHEMATIC DIAGRAM**